Norelco

Acu·Control

Beard and Moustache Trimmer

T930

Rechargeable
Cord/Cordless

PHILIPS

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:
Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a Trimmer that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store Trimmer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this Trimmer from the electrical outlet immediately after using, except when Trimmer is (re)charging.
5. Unplug Trimmer before cleaning.
6. When **discarding** Trimmer, unplug Trimmer to remove rechargeable battery. See Battery Removal instruction sheet.

WARNING

To reduce the risk of burns, fire or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
2. Use this Trimmer for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this Trimmer if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the Trimmer to an Authorized Norelco Service Location for examination and repair.

ENGLISH

4. Keep the Trimmer and Cord away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not charge or plug in Trimmer outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
7. Do not use this Trimmer with a damaged or broken cutter, as facial injury may occur.
8. Always attach plug to Trimmer first, then into outlet. To disconnect, turn ON/OFF switch to "OFF" position (switch is down), then remove plug from outlet.
9. To prevent possible damage to the cord, do not wrap cord around the Trimmer.
10. Never put Trimmer in direct sunlight or store in a pouch at a temperature above 140°F.
11. This Trimmer is for use on human facial hair only. Do not use this Trimmer for any other purpose.

SAVE THESE INSTRUCTIONS

IMPORTANT: YOUR TRIMMER CONTAINS A NICKEL CADMIUM RECHARGEABLE BATTERY.
See Battery Removal instruction sheet.

Norelco

60-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your Norelco Beard and Moustache Trimmer, send the product back and we'll refund you the full purchase price.

The Trimmer must be shipped prepaid by insured mail, insurance prepaid, and have the sales receipt, indicating purchase price and the date of purchase, enclosed. The Trimmer must be postmarked no later than 60 days after the date of purchase. Norelco reserves the right to verify the purchase price of the Trimmer and limit refunds not to exceed suggested retail price.

Send dated sales receipt, your complete name and address as indicated below, and the Trimmer, prepaid to:

Norelco Consumer Products Company
A Division of Philips Electronics North America Corporation
P.O. Box 1116
Skokie, IL 60076

Please allow 4-6 weeks for delivery of check. (Please Print)

Name_____

Address_____

City_____

State_____Zip_____

Telephone No. (____)_____
AREA CODE

REASON FOR RETURNING:_____

_____

_____

_____

_____

_____

_____

TABLE OF CONTENTS

ENGLISH INSTRUCTIONS	
FEATURES	**2 – 3**
TO CHARGE / RECHARGE	**4 – 5**
CORDED TRIMMING	**5 – 6**
CORDLESS TRIMMING	**6**
PUT IT TO THE TEST	**6 – 7**
ACU•CONTROL SYSTEM	**7**
TRIMMING	**7 – 8**
TRIMMING WITH ACU•CONTROL GUIDE COMB	**8 – 9**
TRIMMING FOR "STUBBLE" LOOK	**9**
TRIMMING WITHOUT ACU•CONTROL GUIDE COMB	**10**
TRIMMING WITH POP-UP PRECISION TRIMMER	**10 – 11**
REPLACING GUIDE COMB ATTACHMENT ON TRIMMER	**11**
CLEANING	**12 – 13**
REPLACING THE CUTTING UNIT	**13**
ASSISTANCE	**14**
BATTERY REMOVAL	**14**
SPANISH INSTRUCTIONS	
WARRANTY	**Back Cover**

FEATURES

A. Unique Acu•Control System with Removable Guide Comb Attachment

B. Selected Hair Length Setting Window

C. Unique, Patented Zoom Ring with 9 Pre-select Settings: .06, .1, .16, .22, .3, .38, .48, .6, .72 in./ 1.5, 2.5, 4, 5.5, 7.5, 9.5, 12, 15, 18mm

D. 3-Dimensional Rounded Chromium Steel Cutter Blades

E. Pop-Up Trimmer

F. ON/OFF Switch

G. Soft Touch Grip

H. Charging Indicator Light

I. Cleaning Brush

J. Cord

K. Full Two-Year Warranty

L. 60-Day Money-Back Guarantee

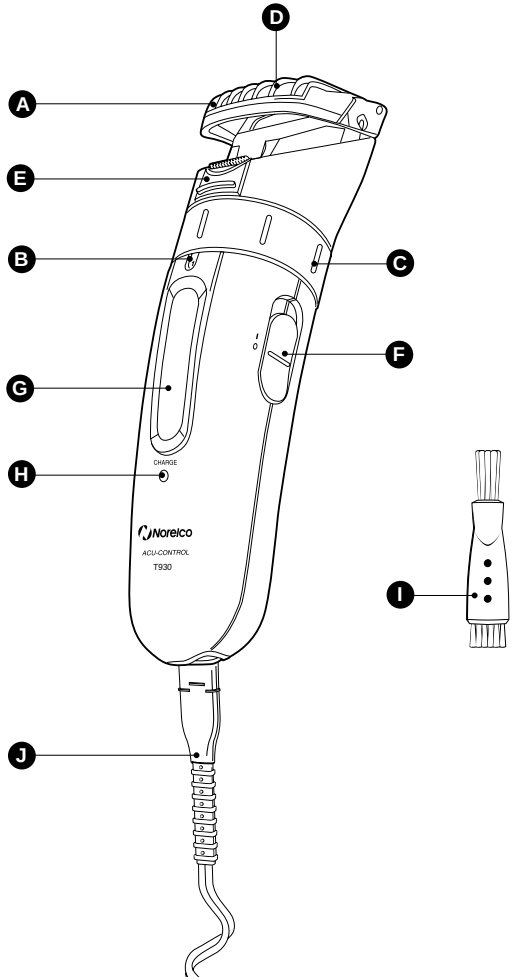

TO CHARGE / RECHARGE

- (Re)charging requires ten full hours.
- Use only the cord provided.
- Battery performance is best if you recharge only when the battery is (almost) completely empty.
- Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifetime of battery.
- Continuously recharging or continuously using as a corded Trimmer will reduce life of battery.
- You may also trim using the cord provided. This Trimmer will not recharge while being used corded.

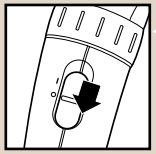

1 Be certain Trimmer is OFF.

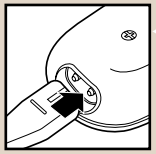

2 Connect cord to Trimmer. Plug into any 100V to 240V AC outlet. Use only the cord provided.

- An adaptor plug may be necessary for cord usage in some foreign countries. Your new Trimmer will automatically convert internally to work on 100V to 240V AC systems.

Do not charge Trimmer in a pouch.

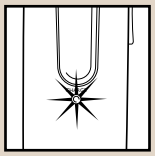

3 Green Charging Indicator Light will go on to indicate Trimmer is charging. It will take 10 hours to fully charge the battery.

4 Disconnect the cord and unplug from electrical outlet.

Optimize the working life of the battery

- After Trimmer has been charged for the first time, do not recharge Trimmer between trimming sessions. Continue using it until the battery is completely empty.
- Discharge the battery completely twice a year by letting the motor run until it stops.
- Do not charge for more than 24 hours.
- Do not keep cord permanently plugged in.
- If Trimmer hasn't been used for a long period of time, Trimmer must be recharged for ten full hours.

CORDED TRIMMING

1 Connect cord provided to Trimmer.

2 Plug Trimmer into electrical outlet.

3 If battery is completely empty, wait one minute before switching Trimmer on.

4 Slide ON/OFF switch ON and begin trimming.

5 Turn Trimmer OFF and unplug.

6 Do not use Trimmer corded when battery is fully charged.

NOTE: Trimmer does not recharge during cord trimming.

CORDLESS TRIMMING

1 Charge according to directions. Unplug Trimmer from outlet.

2 Slide ON/OFF switch ON to begin trimming.

3 If charge runs out while trimming, simply connect cord provided to Trimmer and continue trimming.

PUT IT TO THE TEST

Like many new products, your Norelco Trimmer may take a little getting used to. If you are using an electric Trimmer for the first time, or if you've been using a different brand, take the time to acquaint yourself with your new Trimmer.

Your Trimmer features the unique ACU•CONTROL SYSTEM combined with an adjustable Zoom Ring to make trimming facial hairs goof proof.

Throw your scissors away and put your new Trimmer to the test. We guarantee precise, professional results or Norelco will refund you the full purchase price, guaranteed!

ACU•CONTROL SYSTEM

The unique Norelco ACU•CONTROL SYSTEM puts you in complete control while trimming your facial hairs with **no prior experience needed**. The flexing Guide Comb adjusts automatically to hug the contours of your face for a trim that is both even and accurate. And, it's easy to maneuver over those hard-to-reach areas such as the throat and chin. The patented Zoom Ring Hair Length Selector allows you to choose among 9 preset hair lengths and locks into position so you can control the exact hair length you desire or vary the length of your facial hair. The Norelco ACU•CONTROL SYSTEM with Patented Zoom Ring Hair Length Selector for professional, goof-proof results every time or your money back.

TRIMMING

- Always comb the beard and/or moustache with a fine comb before you start trimming.

- If you are trimming for the first time, be careful. Do not move the Trimmer too fast. Make smooth and gentle movements

Trimming with ACU•CONTROL Guide Comb Attachment

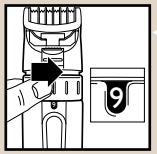

- Guide Comb Attachment must be on Trimmer in order to use Zoom Ring.

1 Turn the Zoom Ring to the desired trimming length setting (see table). The setting will appear in the window below the Zoom Ring.

- If you are trimming for the first time, start by using the maximum trimming length setting #9 to prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust Zoom Ring to desired trimming length. Zoom Ring will "click" into position at each setting.

2 Switch the Trimmer ON.

3 To trim in the most effective way, move the Trimmer against the direction of hair growth. Make sure the surface of the Guide Comb always stays in contact with the skin.

NOTE: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

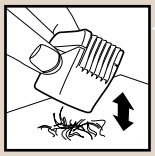

4 If a lot of hair has accumulated in the Guide Comb, remove the Comb Attachment and blow and/or shake the hair out of the comb. The selected trimming length setting will not change when you do this.

Trimming Length Settings Table

#1	Stubble Length or Closely Cropped	.06 in./1.5 mm
#2	Short	.1 in./2.5 mm
#3		.16 in./4 mm
#4		.22 in./5.5 mm
#5	Medium	.3 in./7.5 mm
#6		.38 in./9.5 mm
#7		.48 in./12 mm
#8		.6 in./15 mm
#9	Long	.72 in./18 mm

Trimming For "Stubble" Look

- Be certain Guide Comb is on Trimmer and use setting #1 to result in a "stubble" look.

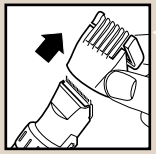

Trimming Without Guide Comb Attachment

Remove Guide Comb Attachment if you are:

- Defining hair lines
- Trimming nape of neck
- Removing single, unwanted hairs

1. Be certain Trimmer is in the OFF position.
2. Remove the Guide Comb Attachment by pulling it off the Trimmer.

Never pull off the Guide Comb Attachment by grasping the flexible top portion. Always pull off by the bottom part of attachment.

3. Switch the Trimmer on.
4. Make well-controlled movements. Touch the hair lightly with the Trimmer.

Trimming With Pop-Up Precision Trimmer

- For use with moustache, contours and single hairs.

1. Remove the Guide Comb Attachment.

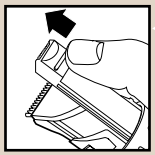

2. Push the Pop-Up Precision Trimmer upwards. When the Trimmer is switched ON, the Pop-Up Precision Trimmer will start to work right away.

NOTE: The main cutting unit will continue to work when the Pop-Up Precision Trimmer is used.

3. Hold Trimmer in vertical position and make strokes.

The Pop-Up Precision Trimmer is also suitable for outlining the edges of the beard, on the neck and on the cheeks.

4. When you have finished using the Pop-Up Precision Trimmer, push it back into the Trimmer.

You can now put the Guide Comb Attachment back on the Trimmer.

5. Turn Trimmer OFF.

Replacing Guide Comb Attachment On Trimmer

1. Be certain Trimmer is in OFF position.
2. Replace Guide Comb Attachment until it "clicks" into position. The Guide Comb Attachment can be placed on Trimmer only one way. If it does not fit properly, reverse it.

NOTE: The Zoom Ring can be on any setting when removing or replacing Attachment.